



DRAENERT



**MONTAGE
ASSEMBLY**

1224 ADLER II

ASSEMBLY

1224 ADLER II - STONE AND WOOD

CONTENT OF DELIVERY

(remains with the customer)


- 3 table top parts, each in a wooden crate
- pedestal with pre-assembled extension frame
- 2 assembly bars
- 2 assembly keys
- 4 countersunk screws M10 x 45 mm - for fastening the main tops
- 4 countersunk screws M10 x 20 mm - for fastening the main tops
- 1 countersunk screw M8 x 16 mm - for fastening the center extension top
- material information
- care agent




ASSEMBLY VIDEO

PERSONS REQUIRED FOR ASSEMBLY: 2 PERSONS


The table is completely pre-assembled;
a re-adjustment of the table tops is generally not required.

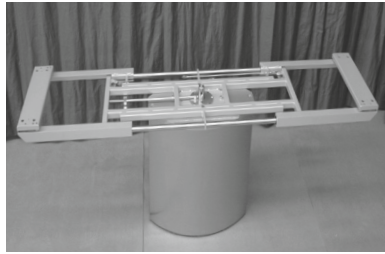


- 1 |** Place the pedestal with the mounted extension frame in the required location and pull out the extension frame completely.

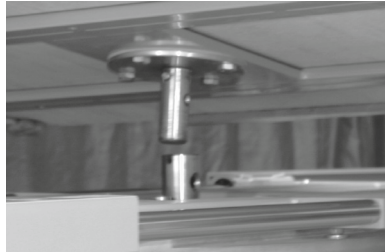


- 2 |** Mount the center extension top with the rod into the adapting tube of the lift cylinder. Make sure of the corresponding boring in the rod and in the tube of the lift cylinder. The hole of the rod has only on one side an internal thread. This thread has to comply with the hole in the tube.

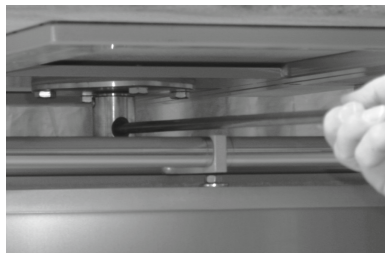

- 3 |** Use the long assembly key to fix the M8 safety screw for the center extension top.

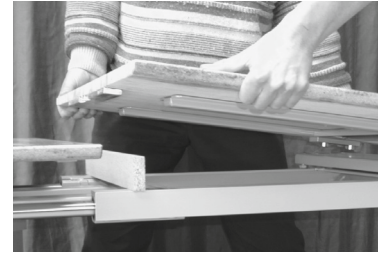

- 4 |** Place the mounting rails with a distance of approx. 5 cm from the inner end of the extension frame across the frame.

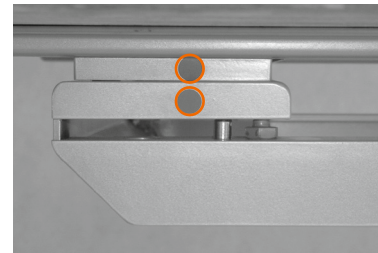

- 5 |** Put the main table tops according to the colored dots on the underside of the table tops and the extension frame.



- 6 |** Push the main table tops carefully together and adjust them evenly at the joints.



- 7 |** Screw-in the M10 countersunk screws at the end of the extension frame without tighten them completely (the long ones on the inside - the shorter ones on the outside).



- 8 |** Please check once more that the gap between the joints is aligned (picture 6) and use afterwards the attached assembly key to tighten all 8 screws.

The table is now ready assembled.

OPERATION

- 1 |** For operating the table it is most easy to do this from one of the two head sides.
The main table tops can easily be pulled apart to the stoppers with both hands.
Please consider the weight and the according mass inertia while moving the table tops.
The table tops should be guided by hand as long as they are still in motion.
- 2 |** When the main tops are completely open the center extension top can be turned 90°.
Due to the spring pressure, it will be lifted automatically up to the table level.
It is recommended to guide the rotating and lifting movement of the center top by hand.
- 3 |** Pushing the 3 table top parts together will lock the table in the open position.
- 4 |** Closing the table is carried out in the reverse order:
Unlock by pulling the table tops apart to the stop.
Push down the center plate and turn it by 90°
Then push the main table tops together.

Further information on the back side.

PFLEGE

Die Auszugsmechanik ist wartungsfrei. Zur Pflege der jeweiligen Plattenart beachten Sie bitte die entsprechende Materialinformation.

STANDORTWECHSEL

Beim Standortwechsel eines komplett montierten Tisches niemals am überstehenden Plattenrand tragen.

Bei Steinplatten besteht die Gefahr des Plattenbruchs. Verwenden Sie hierzu Tragehölzer, die unter den Auszugsrahmen fassen.

UMZUG

Demontieren Sie den Tisch in umgekehrter Reihenfolge. Die Platten müssen separat vom Unterbau transportiert werden. Achten Sie darauf, dass die einzelnen Platten immer nur stehend mit entsprechendem Kantenschutz transportiert werden. Liegender Transport führt zum Plattenbruch!

CARE

The extension mechanism is maintenance free. For the care of each kind of table surface, please see the according material information.

INSTRUCTIONS FOR MOVING THE TABLE

Never carry the table on the projecting edge of the table top.

The table tops, if they are made of stone, may break. Use two wooden bars, which shall be set underneath the extension frame.

REMOVAL

Disassemble the table in reverse order. The table tops must be transported separately from the pedestal. The table tops shall only be transported in an upright position with an edge protection. A horizontal transport inevitably leads to a breakage of the table tops!

DRAENERT GMBH

STEIGWIESEN 3

88090 IMMENSTAAD/BODENSEE

GERMANY

FON +49 (0) 7545 - 2080

info@draenert.de

www.draenert.de

FOLLOW US

