



DRAENERT



**MONTAGE
ASSEMBLY**
1460 FONTANA

ASSEMBLY

1460 FONTANA - STONE AND WOOD

CONTENT OF DELIVERY


(remains with the customer)

- 1 pre-assemble extension frame
incl. the threefold extension top
- 2 main table tops
- 2 leg frames or 2 side walls
- 10 countersunk screws M8 x 20 mm
- 4 countersunk screws M10 x 30 mm
- 4 countersunk screws M10 x 55 mm
- material information

Remaining with the dealer/technician - on first delivery:
two assembly stands



PERSONS REQUIRED FOR ASSEMBLY: MIN. 2 PERSONS, RECOMMENDED ARE 4 PERSONS

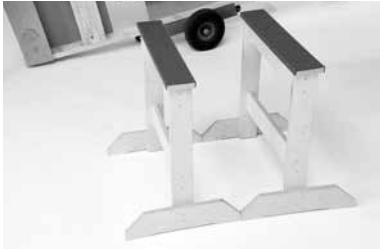

1 | Position both assembly stands at the desired location of the table, that way, that the bases of the stands touch each other.



2 | Remove the 8 wood screws (Spax) according to the marking "☑" at the wooden bars of the transport box. **ATTENTION Under no circumstances loosen the 4 cylinder head screws** (see marked as "⊗"), otherwise the extension frame will fall down in the box and will suffer irreparable damage!



3 | Raise the extension frame from the transport box and slew it from above with the connecting wood bars out of the box and place it carefully on the assembly stands.

Remove the packing protection from the extension top and remove the connecting bars from the extension frame.



4 | Assemble the legs or side walls as per the color marks on both sides.



5 | Lift the assembled pedestal at one side and remove both assembly stands. Cut-off both transport locks (cable straps) at the underside of the table.



6 | Remove the transportation foam between the folded tops, by pulling them a little bit upwards and take away the foam.




7 | Pull -out one side of the frame to the stop. While doing this the integrated three folded tops will unfold automatically. Close now the extension frame by approx. 2,5 cm. **NOTE** You will hear it latch.



8 | Unpack the first main table top and put it, according to the colored marks, first diagonally to the extension top, and put it then carefully on the frame.



9 | Please pay attention that the four protruding cylinder heads at the table top will fit into the holes into the extension frame.

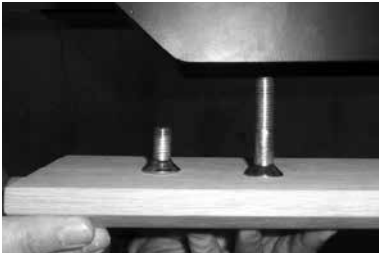

10 | Screw-in first the short countersunk screws M10 x 30 mm at the outer side of the frame, then the long countersunk screws M10 x 55 mm at the inner side of the frame, but not yet tighten them.
SHORT for outside, **LONG** for inside
Please continue the same way with the second main table top.



11 | Push all table tops firmly together and align the main table tops to the threefold extension. Please take care that you will have no gaps between the tops and no mismatches of the table top.




12 | Now fully tighten both short countersunk screws M10 x 30 mm and then the long ones M10 x 55 mm at each main table top.

13 | Operate the table by pulling out one main table top and the threefold extension will lower automatically.

ATTENTION Please do not close the main table tops, until the threefold extensions are completely lowered, as otherwise there will be the risk of collision of the table tops. Pull together the main table tops carefully until you have a gap of approx. 1 cm and check the height of the table tops and the gap dimensions.


Now the table is ready assembled.

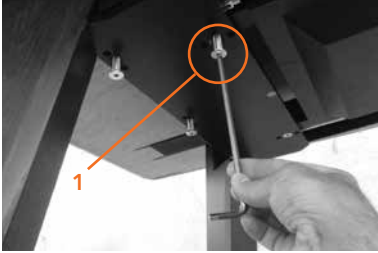

ADJUSTMENT BECAUSE OF UNEVEN FLOORS

When the table tops are slanting diagonally to each other, the floor is uneven. The frame is adjustable. Loosen the fixing screws of the legs or side walls at the lower side of a top (No. 1) and screw-in the adjacent threaded pins (No. 2). The frame will be lifted.

Push the frame with the threaded pins upwards until the main table tops are nearly even and tighten again the fixing screws. Please continue diagonally at the counter side, in order not to bend the frame at one side too much.

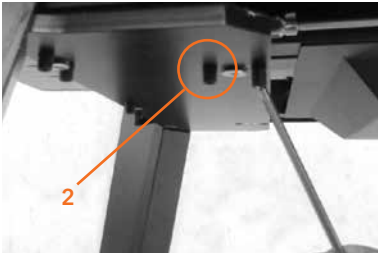

OPERATION

In order to extend the table, pull one of the two main table tops until the three integrated extension tops lift automatically. Close the table by pushing the table tops together again.

The table can again be downsized by pulling at one of the both main table tops, in order to lower again the threefold extension.

ATTENTION Please do not close the main table tops, until the threefold extension is completely lowered, as otherwise there will be the risk of collision of the table tops. No objects may remain on the folding top.

HAZARD WARNING

Do not reach into the mechanism or between the fold tops.

There is highest risk of crushing injuries!

Further information on the back side.

PFLEGE

Der Tisch und seine Faltmechanik sind wartungsfrei. Sollten sich im Laufe der Zeit die Auszugplatten nicht öffnen lassen, ist ein Schmieren der Achsen mit einem handelsüblichen Sprühöl möglich. Hierzu gibt es eine gesonderte Anleitung, die auf Wunsch gerne zugesandt werden kann. Zur Pflege der jeweiligen Plattenart beachten Sie bitte die entsprechende Materialinformation.

STANDORTWECHSEL

Beim Standortwechsel eines komplett montierten Tisches niemals am überstehenden Plattenrand tragen. Bei Steinplatten besteht die Gefahr des Plattenbruches. Verwenden Sie hierzu Tragehölzer, die innerhalb der Beine oder Wangen unter den Rahmen fassen.

UMZUG

Demontieren Sie den Tisch in umgekehrter Reihenfolge.

ACHTUNG Die dreigeteilte Faltplatte darf vom Unterbau nicht demontiert werden! Die Grundeinstellung des Tisches geht sonst verloren.

Die beiden Hauptplatten müssen separat vom Unterbau transportiert werden. Achten Sie darauf, dass die einzelnen Platten immer nur stehend mit entsprechendem Kantenschutz transportiert werden.

Liegender Transport führt zum Plattenbruch!

CARE

The table and its folding mechanism are maintenance-free. Should, in the course of time, the extension tops may not be opened any more, the shafts may be lubricated with a commercial spray oil. For this we offer a special instruction manual, which we may send you on request.

In regard to the care of the various kinds of stone tops, please see the corresponding material information.

INSTRUCTIONS FOR MOVING THE TABLE

For moving a completely assembled table, never carry the table by the projecting edge. The stone tops may break. Please use wooden bars, which are located between the legs or side walls under the frame.

REMOVAL

Disassemble the table in reverse order.

ATTENTION The three-fold extension top may not be disassembled from the extension frame! Otherwise the basic setting of the table will get lost.

Both main tops must be transported separately from the extension frame. Please take care that the single table tops will always be transported in upright position and with the according edge protection.

A horizontal transport inevitably leads to a breakage of the table tops.

DRAENERT GMBH

STEIGWIESEN 3
88090 IMMENSTAAD / BODENSEE
GERMANY
FON +49 (0) 7545 - 2080
info@draenert.de
www.draenert.de